


ROLL POSITIONS

Roldiameter
Diamètre du rouleau
Roll diameter
Rollendurchmesser



Baanbreedte
Laize du rouleau
Roll width
Rollenbreite

Kerndiameter
Diamètre du mandrin
Core diameter
Kernendurchmesser

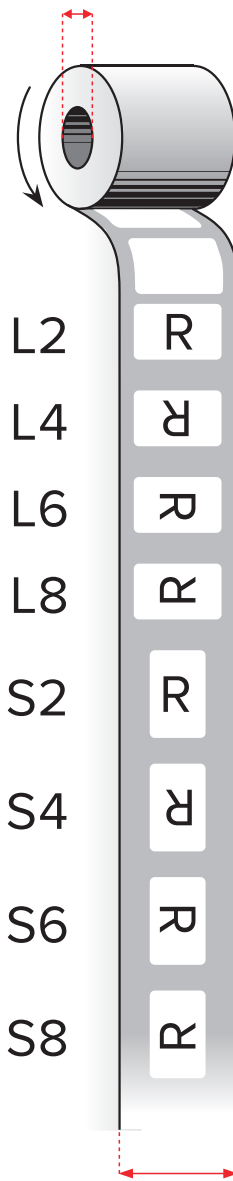

Baanbreedte
Laize du rouleau
Roll width
Rollenbreite

Looprichting
Sens de débobinage
Unwind direction
Laufrichtung

